

# TABLE OF CONTENTS

<b>Paragraph</b>	<b>Title</b>	<b>Page</b>
Chapter 1	DVR2 Features, Options, and Baseline .....	1-1
1.1	Introduction .....	1-1
1.1.1	DVR2 Configurations .....	1-1
1.1.2	Remote Reproducer.....	1-1
1.1.3	Ancillary Equipment .....	1-1
1.1.4	Product Specifications .....	1-2
1.2	DVR2 Recorder Baseline Configuration.....	1-3
1.3	DVR2 Standard backplane Slot placement .....	1-4
1.4	DVR2 Reproducer Baseline Configuration.....	1-4
Chapter 2	Software.....	2-1
2.1	Software Listing .....	2-1
2.1.1	DRU Software Listing .....	2-1
2.1.2	Reproducer Software Listing .....	2-1
2.1.3	Pre-Loaded Spare Hard Disk Software Listing.....	2-1
2.1.4	Workstation Software Listing .....	2-1
2.2	DRU or Reproducer Software Installation.....	2-2
2.2.1	Pre-Setup .....	2-2
2.2.2	MS DOS Installation.....	2-2
2.2.3	Quarterdeck Expanded Memory Manager Installation.....	2-3
2.2.4	Communication Package Installation.....	2-4
2.2.5	Installation Package Installation.....	2-5
2.3	Workstation Software Installation.....	2-6
2.3.1	Windows 95 Installation.....	2-6
2.3.1.1	Formatting Drive C:.....	2-6
2.3.1.2	Installing Windows 95 .....	2-6
2.3.1.3	Installing Networking Software .....	2-9
2.3.2	To Prevent Windows 95 from Prompting for a Password....	2-12
2.3.3	NiceLog Application Installation.....	2-12
2.3.4	Year 2000 Update Installation.....	2-12
Chapter 3	Ancillary Equipment and Troubleshooting Tips .....	3-1
3.1	Global Positioning Satellite.....	3-1
3.1.1	Overview.....	3-1
3.1.2	Installation.....	3-1
3.1.3	Operation .....	3-2
3.2	Troubleshooting Tips.....	3-3
3.2.1	Global Positioning Satellite.....	3-3

# TABLE OF CONTENTS (Cont.)

Paragraph	Title	Page
3.2.2	Uninterruptable Power Supply.....	3-3
3.2.3	Workstation.....	3-3
3.2.4	Ethernet Hub.....	3-4
3.2.5	Dual Cassette Recorder .....	3-4
Chapter 4	Part Lists (refer to List of Part Lists).....	4-1
Chapter 5	Drawings .....	5-1

## LIST OF PART LISTS

P/L	Title	Page
100908-101, -103, -104, -106		
	System Assembly 24 – 96 Channel Configurations .....	4-2
100908-101 w IRR		
	System Assembly 24 Channel Configuration w IRR .....	4-3
100908-108, -109, -110		
	System Assembly 120 – 192 Channel Configurations .....	4-4
100908-111, -112		
	System Assembly 240 – 288 Channel Configurations .....	4-5
100908-113, -114		
	System Assembly 336 – 384 Channel Configurations .....	4-6
101908-101, -103, -104, -106, -108, -109, -110, 111, -112, -113, -114		
	Rack Assembly, DVR2 .....	4-7
110918-202	Workstation Assembly, DVR2 .....	4-9
320908-020	Kit Ethernet Hub Replacement, DVR2 .....	4-10
110909-105, -106, -107, -110	Rack Assembly, DVR2 .....	4-11
102908-101	Reproducer Assembly, DVR2.....	4-13
110918-201	Workstation Assy Rpdr, DVR2.....	4-14
110909-108	DRU Assembly, Reproducer, DVR2 .....	4-15
320910-101	Kit, UPS, 1KVA .....	4-16
320910-102	Kit, UPS, 1.4KVA .....	4-17
320913-101	Kit, GPS, 1 DRU, IRIG B AND E.....	4-18
320913-102	Kit, GPS, 2 DRU, IRIG B AND E.....	4-19
320913-103	Kit, GPS, 3 DRU, IRIG B AND E.....	4-20
320913-104	Kit, GPS, 4 DRU, IRIG B AND E.....	4-21

Table of Contents

DVR2 Maintenance Support LRUs with NSN.....4-22

# LIST OF FIGURES

<b>Figure</b>	<b>Title</b>	<b>Page</b>
Chapter 1		
1-1	DVR2 System Configurations .....	1-1
Chapter 5		
5-1	100908-101, -103, -104, -106 System Assembly, DVR2, 24-96 Channel Configurations .....	5-3
5-2	100908-101 w IRR System Assembly, DVR2, 24 Channel Configuration w IRR .....	5-5
5-3	100908-108, -109, -110 System Assembly, DVR2, 120-192 Channel Configurations .....	5-7
5-4	100908-111, -112 System Assembly, DVR2, 216-288 Channel Configurations .....	5-9
5-5	100908-113, -114 System Assembly, DVR2, 336-384 Channel Configurations .....	5-11
5-6	101908-101 Rack Assembly, DVR2, 24 Channel.....	5-13
5-7	101908-103 Rack Assembly, DVR2, 48 Channel.....	5-19
5-8	101908-104 Rack Assembly, DVR2, 72 Channel.....	5-25
5-9	101908-106 Rack Assembly, DVR2, 96 Channel.....	5-31
5-10	101908-108 Rack Assembly, DVR2, 120 Channel .....	5-37
5-11	101908-109 Rack Assembly, DVR2, 144 Channel .....	5-45
5-12	101908-110 Rack Assembly, DVR2, 192 Channel .....	5-53
5-13	101908-111 Rack Assembly, DVR2, 240 Channel .....	5-61
5-14	101908-112 Rack Assembly, DVR2, 288 Channel .....	5-71
5-15	101908-113 Rack Assembly, DVR2, 336 Channel .....	5-81
5-16	101908-114 Rack Assembly, DVR2, 384 Channel .....	5-91
5-17	110918-202 Workstation Assembly, DVR2.....	5-101
5-18	110909-105 DRU Assembly, 24 Channel, DVR2.....	5-103
5-19	110909-106 DRU Assembly, 48 Channel, DVR2.....	5-109
5-20	110909-107 DRU Assembly, 72 Channel, DVR2.....	5-115

5-21	110909-108 DRU Assembly, Reproducer, DVR2.....	5-121
------	---	-------

## LIST OF FIGURES (Cont.)

Figure	Title	Page
5-22	110909-110 DRU Assembly, 96 Channel, DVR2.....	5-127
5-23	102908-101 Reproducer Assembly, DVR2.....	5-133
5-24	110918-101 Workstation Assembly Reproducer, DVR2.....	5-137